
REACTOR



LED Flasher

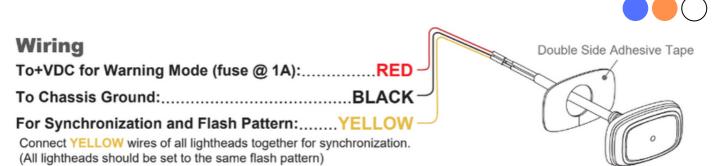

For Simultaneous or Alternating Flash:

Each Warning Mode may select and save one Flash Pattern. While activating a Warning Mode, momentarily apply YELLOW wire to +VDC:

- · Once to the next pattern.
- · Quick three times to the default Flash Pattern (FP#1).

For Simultaneous or Alternating Synchronization:

- Apply +VDC to RED and YELLOW wires simultaneously to enter SETTING MODE; the lighthead will display short flashes:
 - Single flash = Group 1
 - Double flash = Group 2
- Remove YELLOW wire from +VDC then momentarily apply to +VDC to change Groups.
 - · Lightheads of the same Group will flash together.
 - · Lightheads of the different Group will flash alternately.

Reset to Factory Default Settings:


- Apply +VDC to RED and YELLOW wires simultaneously to enter SETTING MODE;
- Remove YELLOW wire from +VDC then momentarily apply to +VDC again for more than 5 seconds. The lighthead will display fast short flashes to signify restoring successfully.
- 3. Save and exit SETTING MODE by disconnecting all power.

FP#	Flash Patterns					
1	Double [2Hz]					
2	Single [2Hz]					
3	Triple [2Hz]					
4	Quad [2Hz]					
5	Random					
6	Steady EF*					
7	Single [SAE/CA13]					
8	Double [SAE]					
9	Triple [SAE]					
10	Quad [SAE]					
11	Quint [SAE]					
12	Mega					
13	Giga					
14	Ultra [SAE]					
15	Single-Quad					
16	Single H/L					
17	Single-Triple-Quint					
18	Steady Scene					

^{*} For use with external flash controller.

Installation

- 1. Drill a 15mm wire passage hole on the mounting surface. Make sure no vehicle parts could be damaged by the drilling process. (Thoroughly deburr hole and use grommet for wire passage hole if needed)
- 2. Clean and dry the mounting surface with 50:50 mix of isopropyl alcohol and water.
- 3. Remove the tape liner from the tape.
- 4. Apply the tape onto the mounting surface.
- 5. Align and apply the lighthead with tape and press it firmly for 30 seconds.
- 6. Full adhesion and bonding will be achieved after 72 hours at room temperature.

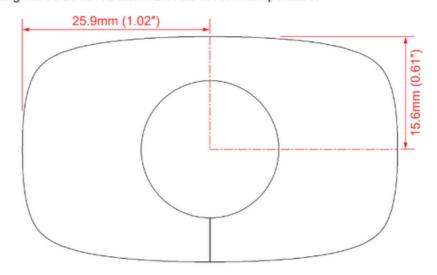


AEB NV Z.5 Mollem 400

REACTOR



LED Flasher

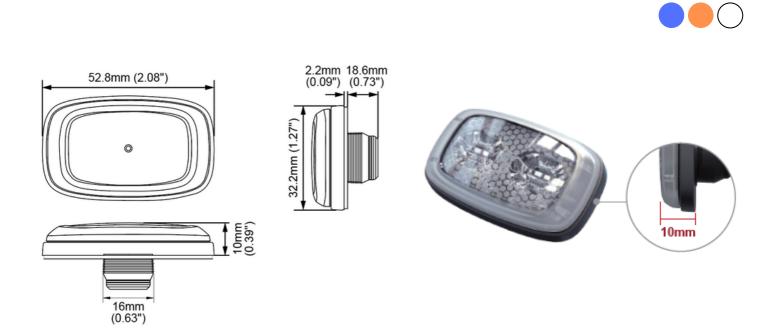

FP#	Flash Pattern					
1	Double	[2Hz]	11	Quint	[SAE]	
2	Single	[2Hz]	12	Mega		
3	Triple	[2Hz]	13	Giga		
4	Quad	[2Hz]	14	Ultra	[SAE]	
5	Random		15	Single-Quad		
6	Steady EF*		16	Single H/L		
7	Single [SAE/CA13		17	Single-Triple-Qu	uint	
8	Double	[SAE]	18	Steady Scene		
9	Triple	[SAE]				
10	Quad	[SAE]				

^{*} For use with external flash controller.