LED FLASHER

O AEB

WIRING / OPERATION

- **RED**: To + VDC (fuse @ 2A):
- BLACK: Ground (Chassis)
- WHITE: For Low Power: Apply +VDC to WHITE wire.
- **YELLOW**: Connect YELLOW wires of multiple lightheads together for synchronization (All heads should be set at the same Flash Pattern)

For Simultaneous or Alternating Flash:

1. Apply +VDC to RED and YELLOW wires simultaneously to enter Grouping mode; lighthead will display short (single or double) flash:

- 'Single flash = Group1
- Double flash = Group2

2. Remove YELLOW wire from +VDC then momentarily apply +VDC to change Groups:


- Heads of the same Group will flash together.
- Heads of the different Group will flash alternately.

For Flash Patterns:

Momentarily apply +VDC to YELLOW wire:

- once for next pattern
- quick three times for pattern 1

FP#	Flash Patterns
1	Single (R65)
2	Double (R65)
3	Triple (R65)
4	Quad (2Hz)
5	Steady

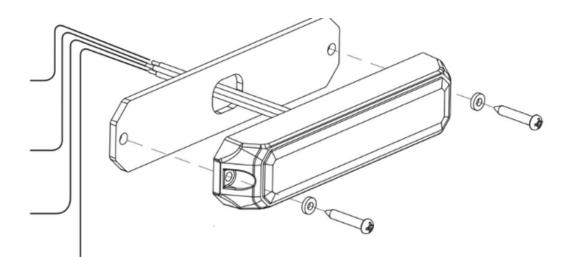

STARLED6P Series

LED FLASHER

INSTALLATION - Adhesive Mount

- 1. Select a mounting location and clean the surface.
- 2. Peel one side of the adhesive and apply to the lighthead base.
- 3. Peel the other side of the adhesive and secure the head firmly to the surface.

INSTALLATION - Screw Mount

- 1. Select a mounting location for the lighthead.
- 2. Mark and drill mounting holes.
- 3. Place the rubber pad to the bottom of the base.
- 4. Secure the head to the mounting surface with supplied screws.

INSTALLATION - Bracket Mount

- 1. Select a mounting location for the lighthead.
- 2. Place the rubber pad to the bottom of the base.
- 3. Place the head to the mounting surface.
- 4. Align top holes of the bracket onto the lighthead base alignment points.
- 5. Secure the head with supplied screws from the bottom of the bracket.

